




# CENTRAL INDUSTRIES

## NATURAL LITE™ PLUS FLUORESCENT LAMPS

### *BENEFITS OF NATURAL LITE™ PLUS FLUORESCENT LAMPS*

- Cool color temperature
- High CRI (Color Rendering Index) portrays colors accurately
- Full spectrum to combat Seasonal Affective Disorder (SAD)\*
- Wide range of wattages and types

\* Light therapy is prescribed by doctors for treatment of Season Affective Disorder (SAD). Radiant Lamp Company makes no medical claims.

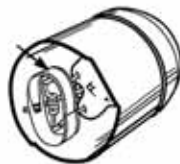

#### **Cathode Guard**

Improves lumen maintenance by reducing end blackening. Lamps burn brighter, longer.

**Recommended Applications:** Laboratories, Retail Environments, Offices, Schools



**Call 800-304-8484 or FAX 800-932-1222**

### **Central Industries, Inc.**

*Specializing in Long-Life, Energy-Saving Lighting Products*

Business Center at Owings Mills

11433-F Cronridge Drive

Owings Mills, MD 21117

[www.centralindustriesUSA.com](http://www.centralindustriesUSA.com)

[CustomerService@centralindustriesUSA.com](mailto:CustomerService@centralindustriesUSA.com)



CENTRAL  
INDUSTRIES



# Natural Lite™ Plus Fluorescent Lamps

Watts	MOL	Order No.	Code Abbreviation	Master Pack	Kelvin	CRI	Lumens	Base
20	24"	60281	F20T12/NATURAL LITE™ PLUS	30	5600	91	820	Medium BiPin
30	36"	60280	F30T12/NATURAL LITE™ PLUS	30	5600	91	1550	Medium BiPin
32	48"	60769	F32T8/NATURAL LITE™ PLUS/ENV	25	5600	91	3050	Medium BiPin
40	48"	60764	F40T10/NATURAL LITE™ PLUS/ENV	25	5600	91	3425	Medium BiPin
40	48"	60806	F40T12/NATURAL LITE™ PLUS	30	5600	91	2150	Medium BiPin
59	96"	60767	F96T8/NATURAL LITE™ PLUS/ENV	24	5600	91	5300	Single Pin
75	96"	60382	F96T12/NATURAL LITE™ PLUS	15	5600	91	4365	Single Pin
86	96"	60768	F96T8/NATURAL LITE™ PLUS/HO/ENV	24	5600	91	7400	Recessed D.C.

## General Information

### Ballast Recommendations

For optimal performance, lamps should be used with high power factor ballasts that meet ANSI standards specified for the lamp's wattage and operating characteristics (i.e. wattage, HO, VHO). Most lamps are designed to operate on rapid start ballasts. T8 lamps operate on T8 ballasts only, F40T12 and F40T10 lamps both operate on ballasts designed for F40T12 lamps. Use of preheat or instant start equipment will result in shorter life or reduced performance. F96T12 lamps are designed to operate on instant start ballasts. For optimum efficiency, electronic ballasts should be used wherever possible.

### Ambient Temperature

Fluorescent lamps are designed and rated to operate at 60°F. Operating the lamps at higher or lower temperatures results in decreased light output, flickering and/or reduced life. High Output (HO) and Very High Output (VHO) lamps can be operated in temperatures as low as -20°F with a ballast designed for low temperatures.

### Lumens

Lumens are a measurement of light output. Initial lumens are measured on a reference ballast in laboratory conditions after the lamps have been burned for 100 hours. Actual lumen output may vary depending upon ballast characteristics, fixture and ambient temperature.

### Watts

Watts are measured at the lamp and do not take into consideration additional wattage that may be used by the ballast. Lamp watts plus ballast watts equal total watts consumed.

### Lamp Dimensions

Published nominal lamp lengths include the lamp and two standard lamp holders.

### Color Temperature

The illuminated appearance of a lamp is defined by its' color temperature expressed in degrees Kelvin. Color temperature is a simulation of the color observed when a metal object is heated. The lower temperatures begin by glowing red, then white and then blue/white. Light sources with a red-yellow glow and a color temperature of less than 3000 are considered "warm" and color temperatures of over 4000 are considered to be "cool".

### Color Rendering Index (CRI)

Color Rendering Index (CRI) is a measure of how accurately colors are represented on a scale of 1 to 100 with incandescent light and sunlight at 100. Fluorescent lamps have a wide range of CRI's with the standard being "Cool White" with a CRI in the 60's. CRI's of 70-80 are considered good and 80+ is considered excellent. Since colors are truer with high CRI lamps, colors appear brighter and light levels may appear higher.

### Cathode Guard

The use of a cathode guard improves lumen maintenance by reducing end blackening. All Radiant F20T12, F34T12, F40T10, F40T12, F48T12, F72T12, F96T12 and F96T12/HO lamps have cathode guards. VHO and U-Bent lamps are not available with cathode guards.

### Envir-O-Light Lamps (ENV)

Lamps designed with reduced mercury content to pass the government's Toxic Characteristic Leaching Process (TCLP) test.



Your trusted source for Triten®, Artic Brite®, Spectralite™, and Natural Lite™

Radiant Lamp Company, Philadelphia, PA 19154-1099, U.S.A. a division of Westinghouse Lighting Corporation, a Westinghouse Electric Corporation licensee

® "Westinghouse" and "You can be sure...if it's Westinghouse" are all registered trademarks of Westinghouse Electric Corporation © 2005 Radiant Lamp Company